

## HOW TO INSTALL ELITE PVC PANEL KITS

PVC panel kits can be installed on columns 6 to 10" square. They can be nailed, pinned or glued to either a wood, fiberglass or PVC column shaft. Be sure to use the right adhesive to suite. all the trims that run horizontally are shipped in 4' lengths. They are to be cut down on site, important note: Do not assume that your shaft is square, measure each side before cutting.

To start, confirm that you have all the parts shown below.



**Step 2: Determine the overall height that you will need and try fit all the parts to confirm that all the trims will fit.**

NOTE: you can vary the exposed section of upper rail.

Step 3: We are working down from the top to bottom, fasten the upper rail to the shaft.

Step 4: Fasten the 4 pre-glued corner trims.

Step 5: Fasten Lower Rail, be sure to butt up against pre-made corners.

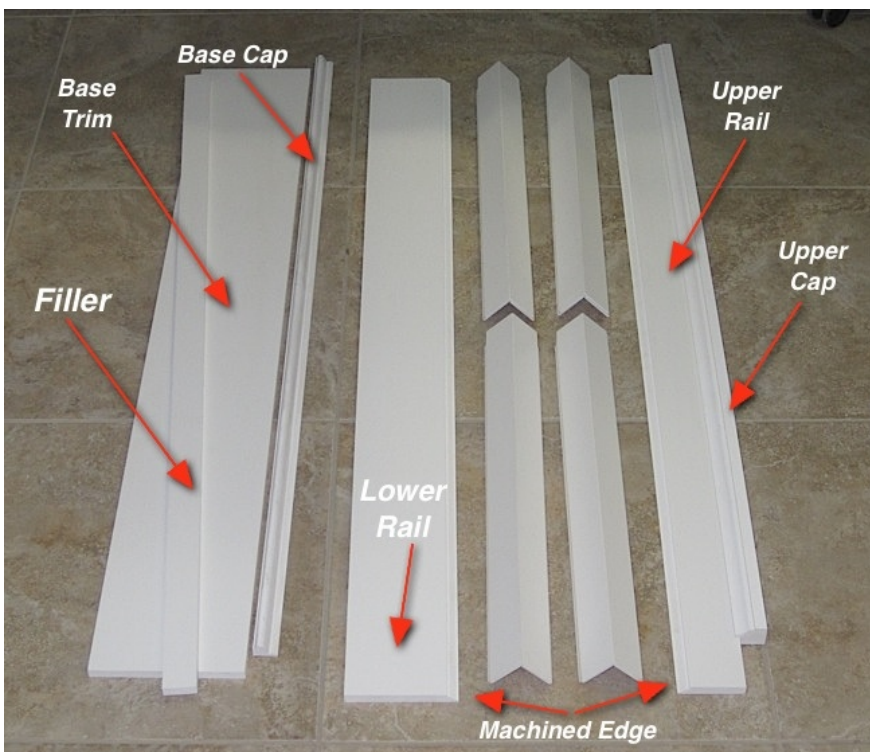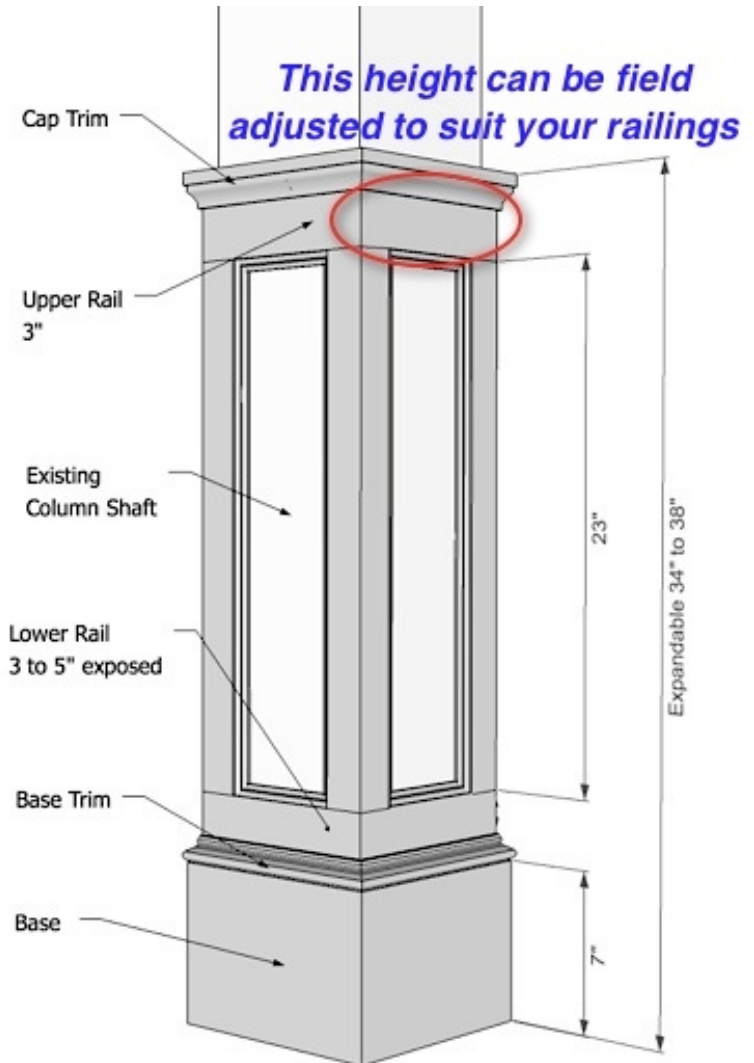

Step 6: Fasten Filler strip, no need to cut or position accurately.

Step 7: Apply 7" tall base trim.

Step 8: Fasten Base Cap.

Step 9: Fasten Cap Trim

Step 10: The final finishing touches, fill all gaps with exterior caulking and paint with exterior paint. Preferably alkaloid or oil base paint.

See back for additional images

# HOW TO INSTALL ELITE PVC PANEL KITS

